USER MANUAL





Shaking



2.4Gz Wireless



MINIDA



MINI DVR

Please read this user manual carefully and thoroughly before any attempt to operate this product and retain it for your future reference.

FEATUERS:

*Button Camera with Remote Control

*HD 1920*1080P Resolution

*Max support 128 GB Memory Card

*90 minutes battery life continuous recording

*2.4G Wireless Remote Control (>4 meters)

*7/24 hours working while charging

DETAILED IMAGES:



Insert the memory card before using the camera ,Note: Please use an original C10 high speed memory card, please format the memory card before using.

OPEARTIONS:

Charging:

Charging the camera while memory card was inserted:

- A. Connect the camera to an external charger.
- B. Charging is indicated without LED light.
- C. Charging time will take about 3 hours.

Charging the camera while without memory card:

- A. Switch the camera On
- B. Connect the camera to an external charger.
- D. Charging is indicated with a red flashing LED light.
- E. Red led light keep on while battery fully charged
 - F. Charging time will take about 3 hours.

The camera is vibration few times then turns off while the camera is low battery

Video Recording:

- A. Switch the camera On
- B. Press the remote (""Unlock" key once to start video recording after the camera vibrating 3 times (Blue led light will flash 2 times then off)
- C. Press the remote (1) "Lock" Key once to stop video recording after the camera vibrating 3 times. (Blue led light will flash 3 times then off

For long recordings, video streaming is saved and divided into separate files every 5 minutes.

7/24 hour working while charging:

- A. Switch the camera ON
- B. Connect the camera to an external charger to start video recording
- C. Press the remote ("Unlock" key once to start video recording after the camera vibrating 1 time (Blue led light will flash 3 times then off)
- D. Press the remote (1) "Lock" Key once to stop video recording after the camera vibrating 3 times .(Blue/Red led light will flash 3 times then off)

^{***}For long recordings, video streaming is saved and divided into separate files every 5 minutes.***

Web Camera:

- A. Do not inserted memory card into the camera
- B. Switch the camera ON
- C. Connect the camera to the computer with USB Cable
- D. Press the remote "Unlock" key once to start video recording after the camera vibrating 1 time (Blue led light turns on)
- E. Open you computer "Camera Capture" software to get the images

When the camera remove from computer ,It will be auto turned off.

Video Replay:

- A. Switch the camera ON
- B. Connect the camera to the computer with USB Cable
- C. Press the remote ""Unlock" key once to start video recording after the camera vibrating 1 time (Blue led light turns on)
- D. A new removable disk will appear on the computer
 - E. Open the removable disk to view the videos .

When the camera remove from computer ,It will be auto turned off.

Time Stamp:

- A. Inserted a SD card into the camera
- B. Switch the camera ON
- C. Connect the camera to the computer with USB Cable
- D. Press the remote "Unlock" key once to start video recording after the camera vibrating 1 time (Blue led light turns on)
- E. The SD card will create a "txt" file (time.txt) in the removable disk
- F. Open the text "time" file to revise the display time / date on your video .

The format is: time

2000-01-01 5:01

Year-Month-Day, Hour: Minute: Second N/Y

2017-06-12,23:59:59 Y (Y: Display)

2017-06-12,23:59:59 N (N:No Display)

G. Saving Files and remove the camera from computer

When the camera remove from computer ,It will be auto turned off.

RELEVANT PARAMETERS:

Items	Relevant Parameters
Video Resolution	1920*1080P @ 30 FPS
Viewing Degree	72 Degree
Video Format	AVI
Video Coding	M-JPEG
Remote control distance	> 4 meters
Storage	Support Max 128GB Memory Card
Battery Capacity	250mAh , 90 mins battery life
Full Charged	About 3 hours
Type of Interface	8 pin USB
Charging Voltage	DC = 110V-220V (5V 1A)